



#37742 **1968-78**
RCU Door Spring
Installation

1. Using a fine point marker, draw a reference line across the striker showing its proper alignment position.



2. Loosen the 2 Phillips head screws & slide the popup spring in between the striker & the screw retaining plate. The spring clip is seated when it bottoms out against the striker.



3. Align the striker to the original alignment line and tighten screws. Repeat on glove box & battery box *.



* The battery box will require removal and regluing of the foam seal. See #36257 for replacement seal, if required.

100 Classic Car Drive, Reedsville, PA 17084
(877) 4AAAdirect or (877) 422-2347 • **AAAdirect.com**