




Installation Instructions

**#33251 1956-1967 Burlap & Burlap Wires  
for Seat Springs / Foam  
(the insert between the springs & foam)**

4 Sheets of Burlap — 20" wide x 20" length and 56 Wires

Seat Back & Bottom: Weaving Pattern for Burlap Wires

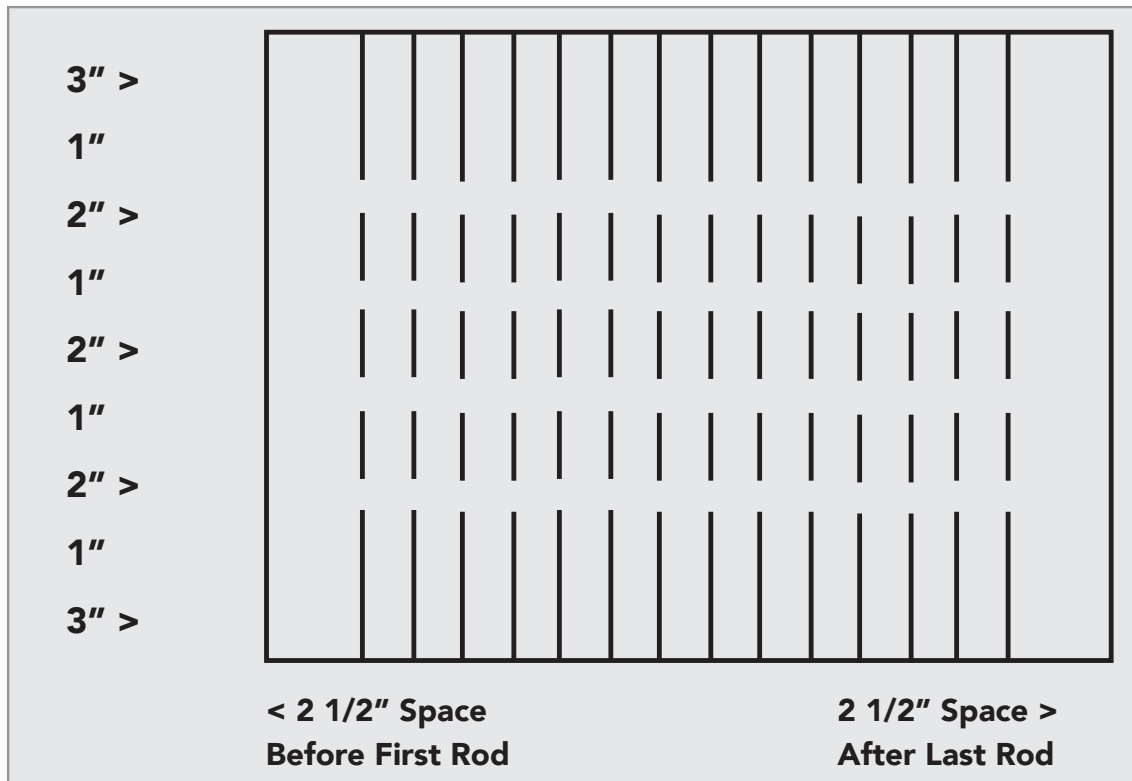

- Fold over Top & Bottom edges of Burlap so final size of rectangle is 16" High x 18" Wide.
- Weave wires through Burlap vertically in the following pattern, spacing them 1" apart and leaving 2 1/2" on each side.

3" Above then 1" Under  
 2" Above then 1" Under  
 2" Above then 1" Under  
 2" Above then 1" Under  
 3" Above then 1" Under

Then crimp end of wire around folded edge of Burlap, 1/2" at Top & Bottom.

100 Classic Car Drive, Reedsville, PA 17084

(877) 4AAAdirect or (877) 422-2347 • Fax: 717-667-3174

Email: [customerservice@AAAdirect.com](mailto:customerservice@AAAdirect.com) • [www.AAAdirect.com](http://www.AAAdirect.com)

