




## *Installation Instructions*

---

### #39945 **1968-77 Door Panel Vapor Barriers**

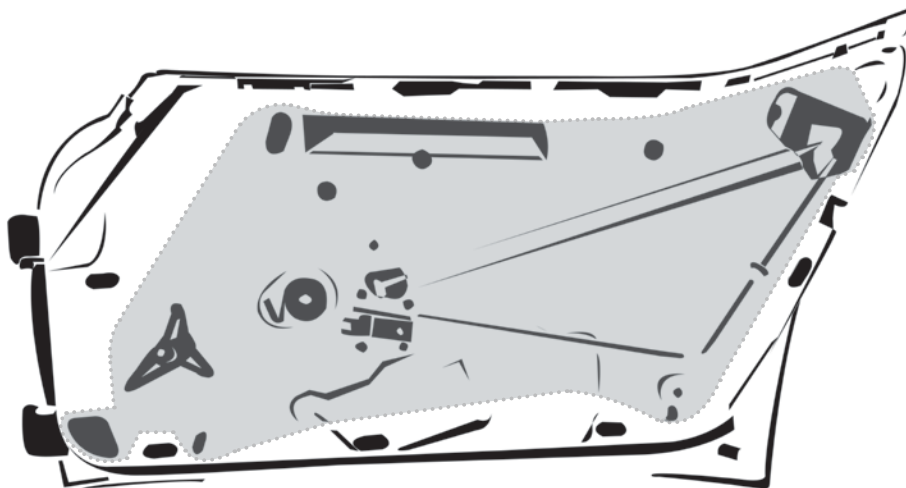

**Tools Needed:** Scraper or putty knife, Clean rags, Rubbing alcohol or other non-petroleum based cleaner, Utility knife, razor blade or scissors

**Installation:** It is assumed that the door panel has already been removed from the door.

1. Inspect the vapor barriers that you have received. The package should contain a pair of formed and trimmed plastic liners, one Left-hand and one Right-hand, and sealant strips.
2. Remove any old sealant from the face of the door by carefully scraping it away with a scraper or putty knife.
3. Clean the area of the door where the sealant strip will be placed with rubbing alcohol and allow to dry completely. The surface where the sealant will be applied must be clean, dry and free of dust, grease, oil or other contaminants.
4. If your Corvette has manual windows, it will be necessary to cut a hole in each liner for the window crank to go through. Use a utility knife, razor blade or scissors.
5. Place the liner on the door to become familiar with the fit and alignment. The holes for the door opening handle and the lock knob post are already in each liner and are good points of reference as is the front bottom corner. After fitting remove the liner from the door.
6. Separate the sealant into individual strips. Using the dotted line in the diagram above as a guide, place the sealant strip in position on each door and press into place with your fingers. Overlap the ends of the sealant as you go from one piece to another. Trim to length as necessary.
7. After the sealant strip is in place, place the liner in position and press the liner against the sealant strip along its entire length. Repeat for both doors.

---

100 Classic Car Drive, Reedsville, PA 17084

(877) 4AAAdirect or (877) 422-2347 • Fax: 717-667-3174

Email: [customerservice@AAAdirect.com](mailto:customerservice@AAAdirect.com) • [www.AAAdirect.com](http://www.AAAdirect.com)

