




## *Installation Instructions*

### #43709 **Embroidered C6 Bumper Bib**



1. Confirm that your template is the same as the one pictured.

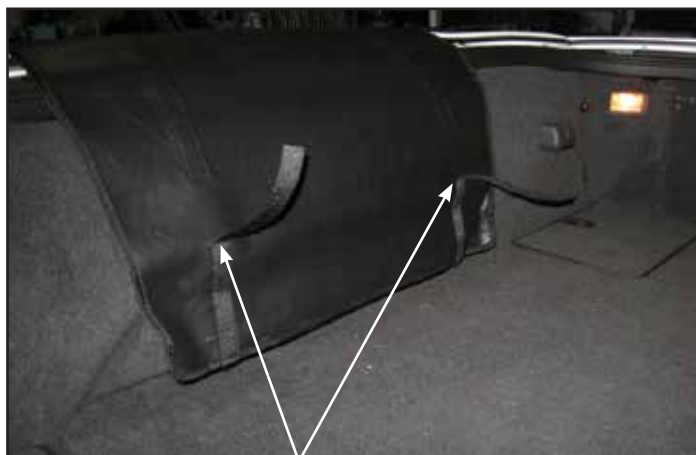

3. Roll the Bib behind the taillamp panel to these points.



2. Gently pull at the bottom of the taillamp panel here, and roll the front part of the Bib underneath so it lays flat against the backside of this panel.



4. While pulling at the bottom of the taillamp panel, feed the Bib up the backside. Once finished, push the panel back into place.

---

100 Classic Car Drive, Reedsville, PA 17084  
(877) 4AAAdirect or (877) 422-2347 • Fax: 717-667-3174  
Email: [customerservice@AAAdirect.com](mailto:customerservice@AAAdirect.com) • [www.AAAdirect.com](http://www.AAAdirect.com)





5. When rolled correctly, the Velcro that holds the Bib should be aligned as shown.



7. Velcro and possible mounting location highlighted on passenger side. The velcro pieces are not installed on our test car.



6. The kit comes with little pieces of Velcro to secure the corners of the Bib when unrolled. They go on the inside of the water-trough surrounding the trunk opening.

