



FBM655V - Installation Instructions

The NoviStretch™ FBM655v mask is easily secured using snap fasteners integrated into the design. This requires snap-head screws, supplied in the hardware kit, be installed on the car as described below. The initial installation should require approximately 15 minutes to complete. After setup the mask can be easily installed and removed in just under one minute.

The **FBM655v** is designed for installation on all **2005-2013 6th Generation Grand Sport, Z06 and 427 Corvettes**.

Enclosed you will find:

- FBM655v Mask
- Hardware Kit containing fourteen (14) snap-head screw studs
- Installation Instructions & Warranty Information

Tools Required:

- Short handle Philips screwdriver
- #15 Torx head screwdriver
- Socket wrench
- 7mm socket



NOTE: Installation Video available to view at www.NoviStretch.com

Step 1

Clean the bumper and surfaces under the car and the fender wells thoroughly (*tar and grease remover is recommended*).

Step 2 (Fig. 2)

Turn the front wheels to gain easier access to the fender liner mounting screws that you will be replacing.



Step 3 (Fig. 3)

Locate the mounting screws at the edge of the bumper inside the fender liner and remove them. Replace each one as you go with the supplied snap-head screw studs. Repeat this step on the other side of the car.



Step 4 (Fig. 4)

Begin the installation by fastening the snaps on one end of the mask to the screws just installed on the edge of the bumper.



Step 5 (Fig. 5)

Stretch the mask across the front of the bumper and attach to the other side of the car



Note: Take extra-care when stretching the mask over and around the Splitter or Spoiler, rough edges and corners on groundfx can damage the mask over repeated installations.

(Instructions continue on other side)


Step 6 (Fig. 6)

Pull the bottom edge of the mask down under the bumper, noting the position of the snaps on the bottom edge of the mask. Replace the screws on the bottom of the bumper that best align with the snaps on the mask with a snap head screw stud. Fasten the snaps on bottom of the mask to the screws just installed on the bottom of the bumper.



Step 7 (Fig. 7.1 and 7.2)

Open the hood. Hold the top of the mask and pull it up to the hood opening. Secure the top corners of the mask to the body frame by looping the open straps on the mask over the tab alongside the hood-hinge.

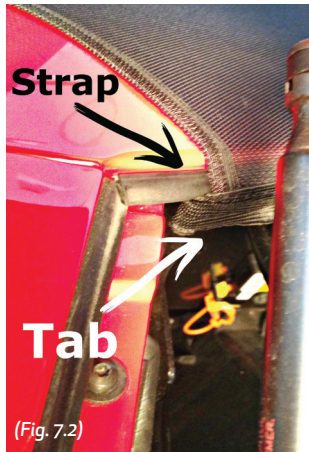

Step 8 (Fig. 8)

Remove the screws on the frame that best align with the snaps on the mask and replace with a snap head screw stud. Secure the mask by fastening the snaps on the mask to the snaps just installed.



Surface Prep & Care Instructions

NoviStretch® covers are constructed from synthetic stretch fabric that will not chaff or damage the painted surface and have been designed to perform in all weather & road conditions.

It is **important** that the painted surface be clean prior to installation of the cover. Over time and use, dirt or dust, may work its way between the cover and the painted surface. Regular cleaning of both the cover & surface is **essential** to provide proper protection. Severe weather conditions or travel on off-road surfaces increase the recommended frequency for inspection and cleaning.

It is expected to see some cosmetic damage (small holes, thinning, fading or discoloration) to the mask over time & miles as it does its job. However, proper care will maximize product life.

Cleaning and Care Instructions

- The mask can be cleaned by rinsing in water to remove any dirt or debris then squeezing the water out and let air-dry. Wash (by hand) only as necessary.
- Use a concentrated soap solution on areas of the mask that may be particularly dirty.
- Always ensure areas covered by the mask are clean and free of sand and grit before installing the mask.
- Avoid obstacles and low clearance areas in the roadway that may come in contact with the bottom of the car causing the mask to snag and the material to tear.

Notice: Patent Pending; NoviStretch™ Copyright © 2016 Novigo Designs, LLC. All Rights Reserved.

NOVIGO DESIGNS™ TWELVE (12) MONTH LIMITED WARRANTY

Novigo Designs, LLC warrants this product against “defects in material and workmanship” for a period of twelve (12) months from the original date of purchase by the original consumer purchaser. For full details and explanation of warranty coverage, requirements and policy – please go to the “Support” section of www.NoviStretch.com. Novigo Designs (and its authorized distributors) liability is limited to the materials and workmanship of the product. Novigo Designs is not responsible for damage caused by the product to the paint or finish of the vehicle. To avoid any possible damage and to get the maximum benefit from your Novigo Designs product, carefully follow the installation and care instructions provided. Novigo Designs, LLC.