



Installation Instructions

Wind Deflectors to Fit 1984-1994 Corvettes



Tools Required

1. Pop Rivet Gun
2. 1/8 Pop Rivets
3. 1/8 drill bit
4. Electric Drill

NOTE/NOTICE! Due to assembly line production, there is the possibility of mirror geometry variances. Before installing your Wind Deflector, check the clearance between the top edge of the part where it borders the windshield. If the Wind Deflector is too wide, it can be trimmed to fit using a file, belt sander or planer.


THERE ARE TWO OPTIONS FOR INSTALLATION OF YOUR WIND DEFLECTORS

METHOD 1:

Clean all dirt, grease and wax from cockpit side of the mirror. Using tape provided, peel one side of liner and apply tape to the mirror side of the Wind Deflector. Peel away remaining side of liner paper and press the Wind Deflector into position against the mirror.

METHOD 2:

For a permanent installation, three 1/8" pop rivets may be used. Rivets should be located towards the front and back edges of the Wind Deflector (see diagram). After drilling the 1/8" rivet location holes in the Wind Deflector, hold it in position against the mirror and mark the location of holes onto the mirror casing. Drill necessary holes and install the pop rivets.

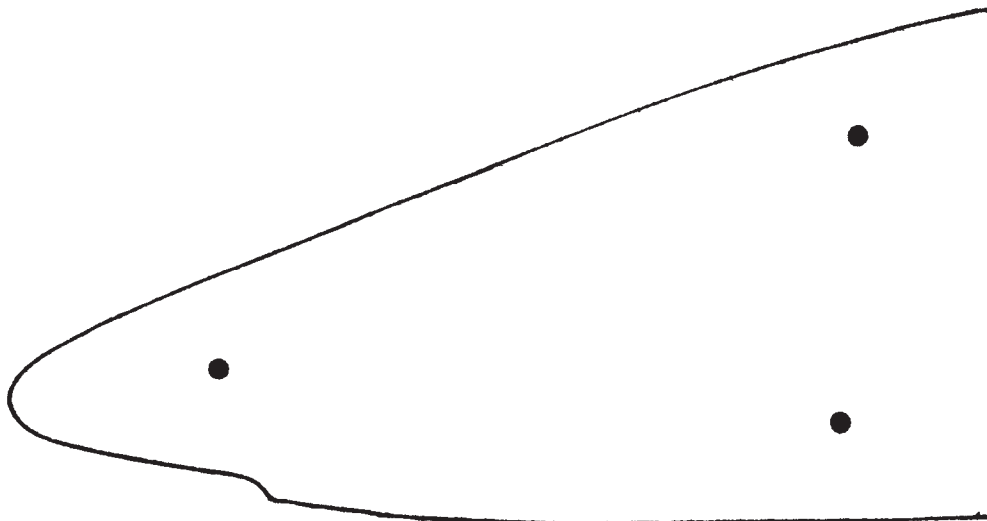

100 Classic Car Drive, Reedsville, PA 17084

(877) 4AAAdirect or (877) 422-2347 • Fax: 717-667-3174

Email: customerservice@AAAdirect.com • www.AAAdirect.com

